

## Pro Series WetRail Multifit Single Function Slide Shower VPRS042

Congratulations on your purchase of this high quality product from Voda Plumbingware.  
Please read the following before installation and retain (along with your receipt) for future reference.

### TECHNICAL SPECIFICATIONS

#### Suitable for All Pressures

Minimum Pressure = 35kPa

Maximum operating Pressure = 500kPa\* (As per NZ Building Code AS/NZ 3500.1)

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

### CONFIGURATION

Mains Pressure systems Install the flow regulator as shown.

Unequal Low systems Install as supplied.


Equal Low systems Install as supplied.

### INSTALLATION

**\*FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY. TO BE INSTALLED AS PER THE REQUIREMENTS WITH AS/NZS 3500.**



#### WET RAIL CONFIGURATION (SEE DIAGRAM OVERLEAF):


- Remove rail set from pack, detach threaded rail end using an 8mm Allen key, detach bottom bracket.
- Re-fit bracket and threaded rail end.
- Remove the threaded brass connection piece from top bracket and screw it to the wall outlet. Fit wall disc.
- Remove the brass wall bracket insert from the bottom bracket and fit it to the wall using a screw.
- Slide rail set onto both top and bottom brackets, secure it with the screws and Allen key.
- Fit hose and handset
- Turn on mains supply and check for leaks.

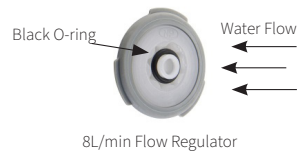

#### Mains Pressure installation only:

Insert the flow regulator with the O ring facing away from the hose (as shown). This will comply with the WELS rating.

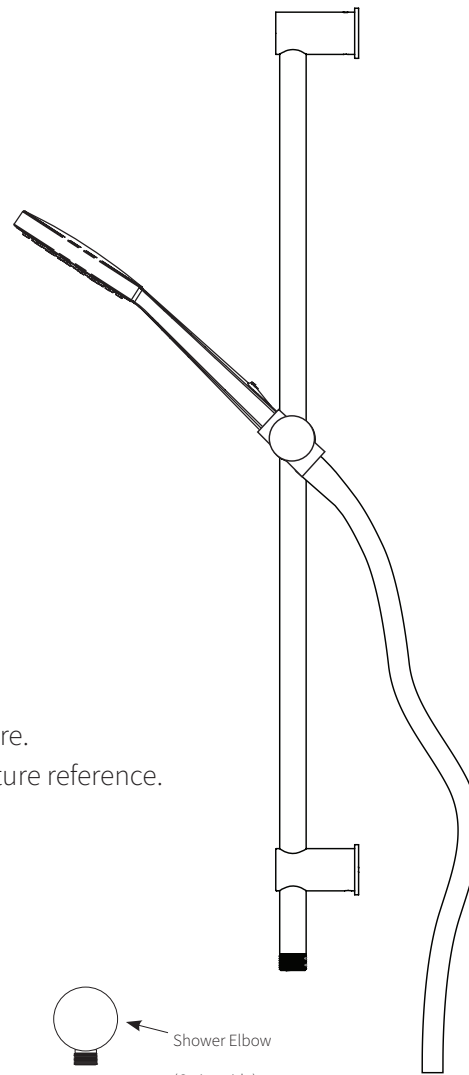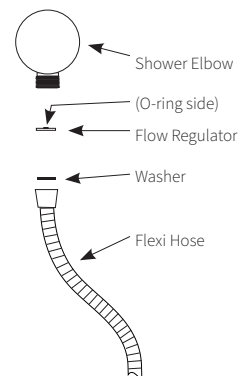

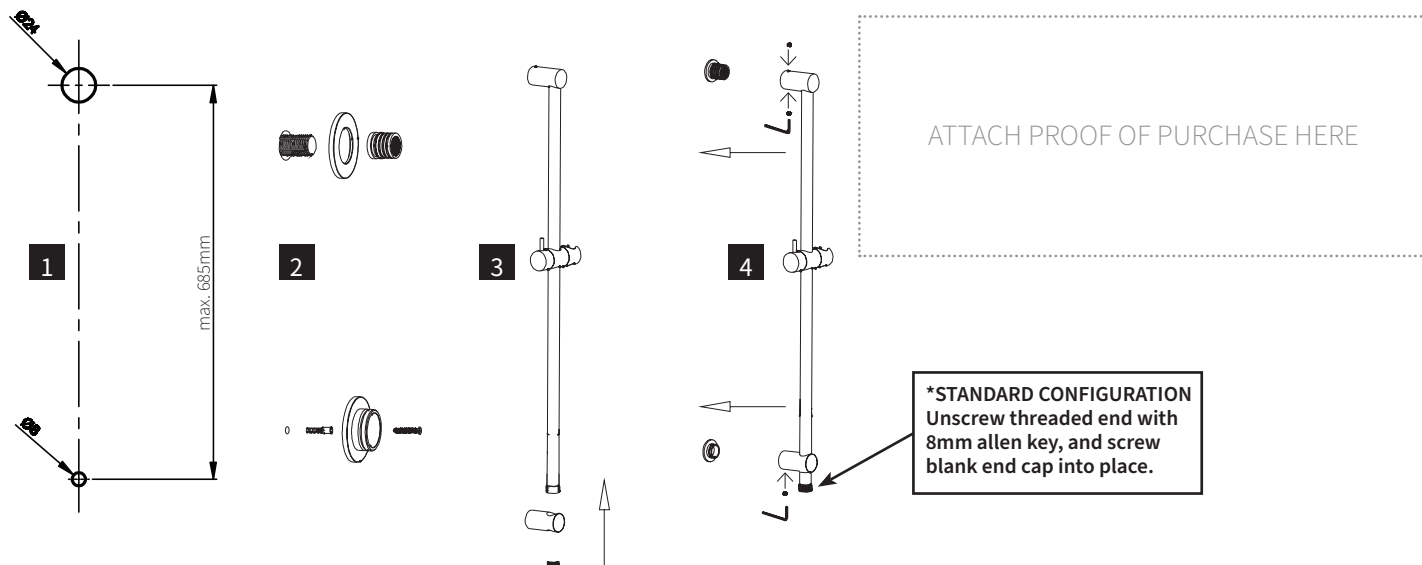

### **STANDARD CONFIGURATION:**

- \*Remove the threaded rail end from the rail using an 8mm Allen key, and screw blank cover plug into place.
  - Detach bottom bracket, and re-fit the bracket.
  - Remove the threaded brass connection piece from top bracket. Utilise the additional brass wall bracket insert instead.
  - Remove the brass wall bracket insert from the bottom bracket, fit both brass inserts to the wall using screws.
  - Slide rail set onto both top and bottom brackets, secure it with screws and Allen key.
  - Utilise the supply elbow provided.
- Fit hose and handset.
  - Turn on mains.
  - Check for leaks.

### **WARRANTY**

#### **PLEASE CALL US BEFORE REMOVING OR UNDERTAKING ANY REPAIR WORK.**

Please refer to our website for warranty information: [www.vodaplumbingware.co.nz/warranty](http://www.vodaplumbingware.co.nz/warranty)

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 367 366 – as unauthorised removal of the product may void the warranty.

### **CARE AND MAINTENANCE**

#### **SHOULD NOT BE CLEANED WITH ACIDIC, CAUSTIC/ALKALINE, ABRASIVE OR CITRIC CLEANERS.**

A soft, damp cloth is recommended for cleaning (Not a Micro fibre cloth). Mild soap solutions can also be used on occasion. See website for full care instructions: [www.vodaplumbingware.co.nz/tapware-care-instructions/](http://www.vodaplumbingware.co.nz/tapware-care-instructions/)